# **CS-2003**

## Voice Alarm System Monitoring module

#### **Key points**

Monitor up to 3 amplifiers / loudspeakers' lines

Cascadable addressable through fieldbus

Management of backup amplifier

Line monitoring with integrated loudspeaker

EN 54 - 16





#### More details

CS-2003 monitors up to 3 amplifiers and their linked loudspeaker's lines, the communication and audio bus coming from the central unit as well as a standby amplifier, without stopping the broadcasting.

Connected through fieldbus, the central unit retrieves all the system operation information and handles broadcasting and backup amplifier switchover.

CS-2003 has a dedicated input for each zone, which makes connection to a matrix PA sound system easier. A set of LED gives live indication on the configuration, as well as other device's status. Through an integrated loudspeaker, live listening of 100V output lines is possible.


FEATURES		
Input	XLR / O dB	
Output	Terminal block / 100V	
Frequency range	100 Hz – 18kHz	
THD + N	< 0,01%	
S/N ratio	> 75 dB	
Power supply	24V DC / 160mA max.	
Dimensions	483 x 328 x 45mm 1U / 19" rack	
Color	Black	
Material	Metal	
Weight	3,7 Kg	



# **Voice Alarm System** Monitoring module

### Front

2 in 1 button = "Lamp test" / ▲: used to test product's LED and for configuration purpose

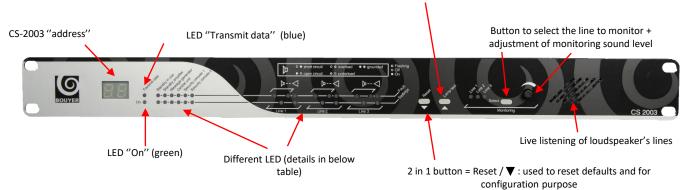

LED designation	If LED is blue (configuration)	If LED is yellow (default)
Standby in use	Shows that a backup amplifier is connected to the system	Shows a default of a backup amplifier connected to the system
Standby amplifier	Shows that backup amplifier monitoring is activated	Shows a default of backup amplifier connected to CS-2003
Message generator	Shows that monitoring of message generator from CS-2006 central unit is activated	Shows a default with message generator from CS-2006 central unit
Central unit	Shows that monitoring of CS-2006 central unit connected to the system is activated	Shows a connection default with CS-2600 central unit
Security console 1	Shows that monitoring of a GX-2500 console connected on bus 1 is activated	Shows a connection default with GX-2500 console connected on bus 1
Security console 2	Shows that monitoring of a GX-2500 console connected on bus 2 is activated	Shows a connection default with GX-2500 console connected on bus 2
Line 1, 2, 3	Shows that line monitoring elements is activated: amplifier and loudspeakers' line	Check product silkscreen priniting (combination of 2 LED). For the amplifier, shows there is a default  O short circuit O overload O off O off O off

### Rear

RJ45 "Control In" / "Control Out" port for signals' monitoring (RS485, amplifier status, AUX input remote)



"In Stby chain" for chaining with another CS-2003 2 points DIP Switch:

- "Stby chain": to validate the backup amplifier signal between 2 CS-2003 using the same backup amplifier

6 points "Lines 100V" connector

- "RS485 EOL": if a end of line device is connected on RS485 bus

RJ45 "Audio In" / "Audio Out" port for audio inputs' connection (GX-2500/1, GX-2500/2, message generator, AUX input)

